
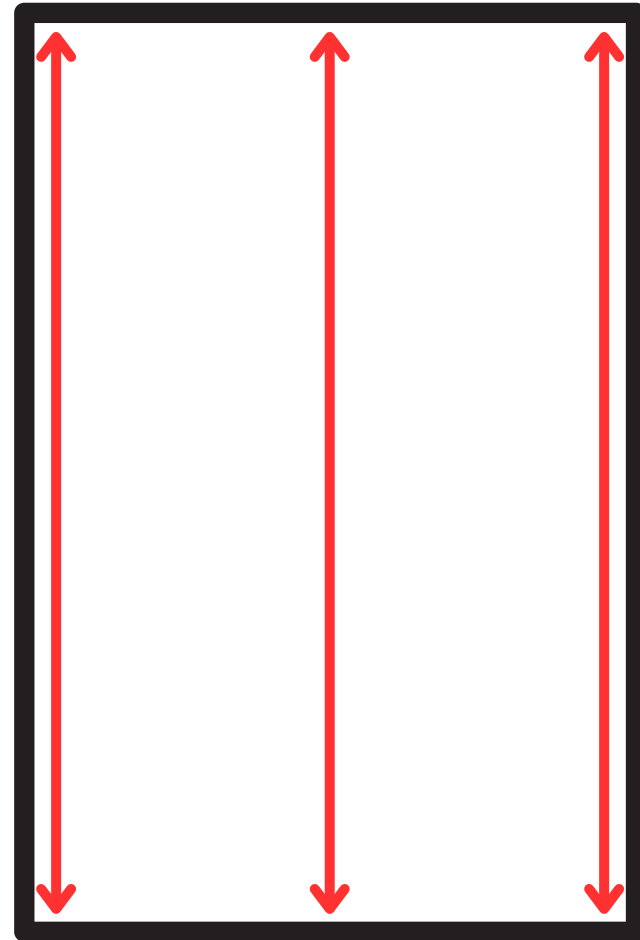


Final measurements for each opening:

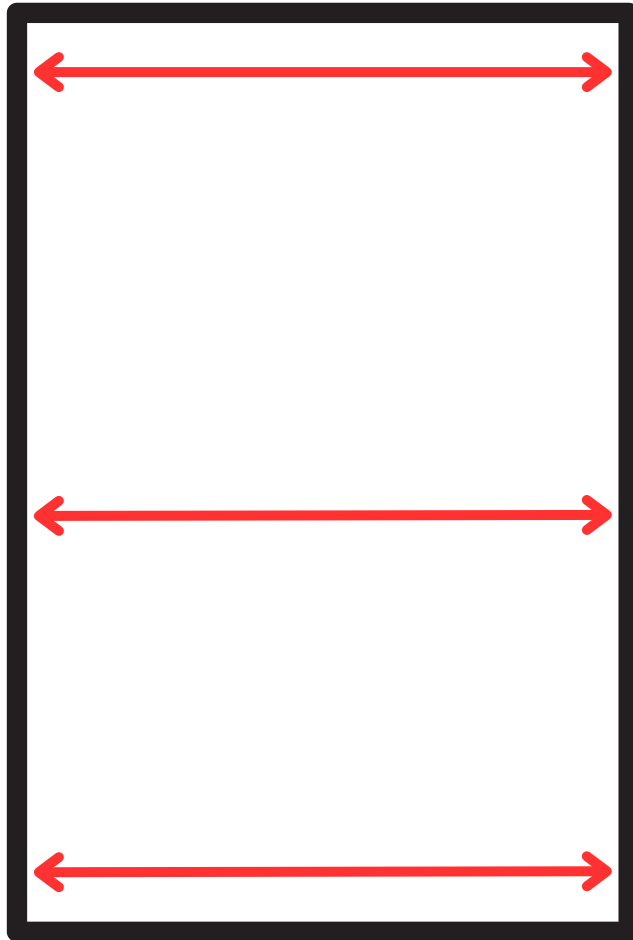

Take three measurements horizontally and vertically (tight to the corners and one in the center each way). Take the smallest measurement of the three each way, and deduct 1/4 inch for final opening measurement. Order configuration is (wxh)

Installation Instructions

1) Place the window in the opening, square the window and make sure the window is centered.

2) Check for equal width between window and opening all the way around (use shims if needed).
Fasten top and bottom screws first.

3) Check for window tension, windows should not drop on there own, and should not be too tight to operate.

4) Fasten side screws. If windows needs tension, use a shim to squeeze the frame slightly, than fasten the sides.

5) If screen needs tightening, remove the spline on either one of the vertical sides, pull screen tight, and re insert spline with roller. Trim off the excess screen. Trim screen on outer edge and be careful not to slice inside of the splines.

